















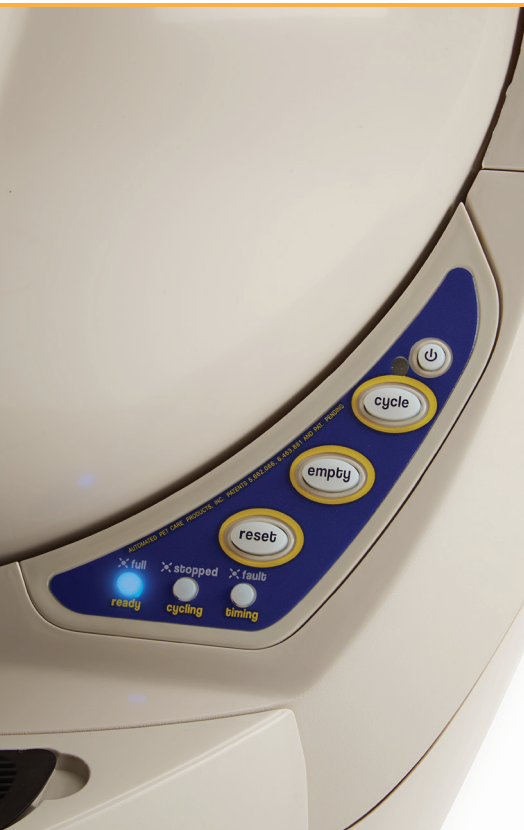
What do the lights mean?





-  **Illuminated:** Standby; unit is ready for use.
-  **Flashing:** Drawer Full Indicator
Waste Drawer is approaching full.
-  **Illuminated:** Unit is cycling or paused.

Flashing Slowly (about once per second):
Cycle interrupted:
 1. **Cat Re-Entry Protection:** Cat Sensor activated during cycle, or
 2. Bonnet removed or disconnected
-  **Flashing Quickly (about four times per second):**
Anti-Pinch Safety Feature detects pinch condition.
-  **Illuminated:** Cat Sensor activated by cat entering Globe while unit ready for use. Upon cat's exit, Wait Time (default 7 minutes) will count down to Clean cycle.
-  **Flashing:** Cat Sensor Fault
Cat Sensor activated continuously for 2 minutes or more by:
 1. Too much weight in unit, or
 2. Cat that won't leave unit
-  **Power Button Illuminated:** Backup Battery Mode
-  **Illuminated:** 8 Hour Sleep Mode
-  **Flashing sequentially:** Motor detects obstruction or jam.
-  **Flashing sequentially:** Cannot find Dump position.
-  **Flashing sequentially:** Cannot find Home position.
-  **Flashing simultaneously:** Cannot find Dump or Home positions.

What to do:

- No action required.
- Empty Waste Drawer, install new liner, then press the **reset** button to cancel indicator, reset Cat Sensor, and return to standby with blue light on.
- No action required. To pause a cycle, press any button. Press the **cycle** button to resume cycle, or press **reset** or **empty** to abort cycle and return Globe to Home position.
- Cat Re-Entry Protection:**
Unit will resume cycling 15 seconds after cat leaves Globe.
- Bonnet:**
Check that Bonnet tabs at sides and rear are secured to Base. Unit will resume cycle 5 seconds after Bonnet is replaced.
- Turn unit off. Check Waste Port in Base and remove any obstruction. Turn unit on. Press the **reset** button to cancel indicator light and return Globe to Home position.
- No action required. To cancel the Wait Time and reset the Cat Sensor, press the **reset** button. Unit will return to standby with blue light on.
- Check for excess weight, such as too much litter or waste. When you are done, press the **reset** button to cancel indicator light and reset Cat Sensor. The unit will resume previous function (either resume Clean cycle with yellow light on or return to standby with blue light on).
- If use of Backup Battery is not intentional, make sure unit is plugged in to wall outlet.
- No action required. Press and hold the **cycle** button for about 5 seconds to deactivate.
- Turn unit off and remove Bonnet and Globe. Check for gear/motor obstruction. Reassemble unit and verify proper litter level. Power on. If problem persists, contact Customer Service.
- Unit will continue to function in Automatic Mode. Contact Customer Service.
- Unit will continue to function in Automatic Mode. Contact Customer Service.
- Unit will not cycle. Contact Customer Service.



	Press & Release	Press & Hold 5 Seconds
 Power Button	Turns system power on and off.	Automatic Night Light Turns Night Light function on and off.
 Cycle Button	Clean Cycle At Home position with blue light on, press Cycle to start Clean cycle (yellow light will be on while cycling). To pause cycle, press any button. Press Cycle to resume cycle. Press Empty or Reset to abort cycle and return Globe to Home position.	8 Hour Sleep Mode Activates 8 Hour Sleep Mode. The yellow and blue lights will be on and the Cat Sensor will be inactive for 8 hours. The unit will only cycle if you press the Cycle button. Repeats every 24 hours according to the initial set time. To cancel Sleep Mode, press and hold Cycle.
 Empty Button	Empty Cycle At Home position with blue light on, press Empty to empty all litter from Globe into Waste Drawer for easy disposal. To pause cycle, press any button. Press Cycle to resume cycle. Press Empty or Reset to abort the cycle. Empty cycle stops at Dump position with yellow light on. Press any button to return Globe to Home position.	Wait Time Setting Enters Wait Time Setting indicated by one of the lights flashing. Use Reset button to toggle through Wait Times: <ul style="list-style-type: none"> • Blue flashing = 3 minutes • Yellow flashing = 7 minutes (default) • Red flashing = 15 minutes Press and hold Empty to save setting.
 Reset Button	Reset Cat Sensor At Home position with blue light on, press Reset to reset the Cat Sensor (after adding or removing litter, emptying Waste Drawer, or moving the unit). While cycling, press Reset to pause cycle. While paused, press again to abort cycle.	Control Panel Lockout Activates Control Panel Lockout (blue light will blink momentarily). Locks out button functions to prevent unwanted changes, while allowing unit to function normally. To unlock Control Panel, press and hold Reset until blue light blinks momentarily.